

# CT-S100 Casiotone

## Quick Start Guide

After reading this document, keep it in a safe place along with the warranty certificate. Be sure to read the "Safety Precautions" in the separate "READ THIS!" sheet, and use the product correctly.

For more detailed information about the product and its operation, visit the CASIO website by accessing the nearby QR code or the URL below.  
 Available Information: User's Guide, Music Scores, etc.  
<https://support.casio.com/global/en/emi/manual/CT-S100/>



### Included Accessories

- Music Stand
  - Leaflets
    - READ THIS! Sheet
    - Other (Warranty, etc.)
- Items included as accessories are subject to change without notice.

## Preparation


### Preparing a Power Supply

#### Using the AC Adaptor

- 1 Connect the AC adaptor as shown in the nearby illustration.

#### Using Batteries


- 1 Open
- 2 Load six AA-size batteries.
- 3 Close
- 4 Specify the battery type.
  - See "Configuring Function Settings" on the reverse side of this sheet.

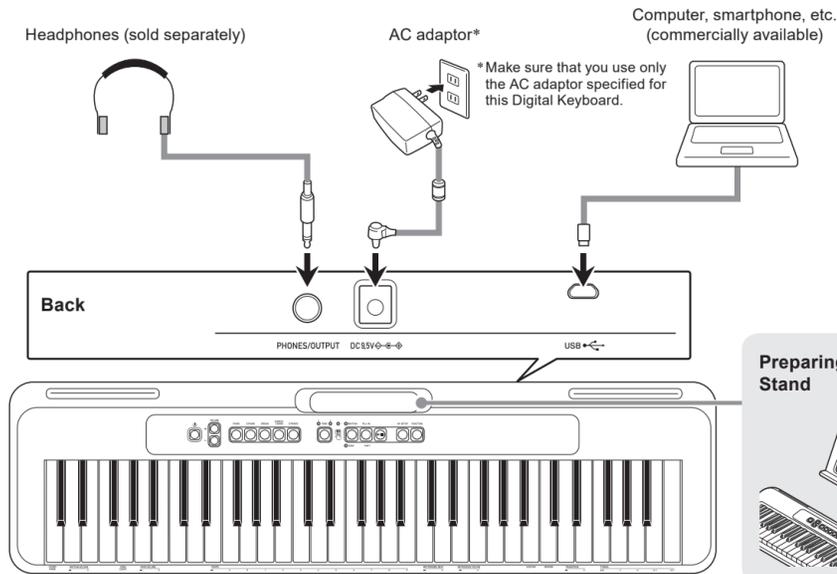

### Preparing the Music Stand



## Basic Operation

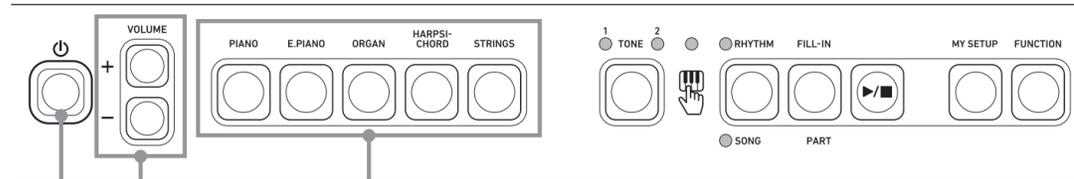

#### Power button

Press to turn on power. To turn off power, hold down this button until the LED goes out.

#### Volume buttons

Use to adjust the overall volume level range.

#### Five main tone buttons

Use these buttons to select any one of the five main tones for keyboard play.

#### Auto Power Off


Automatically turns off power after 30 minutes of non-use. (On, Off switchable)

## Sounding the Metronome


- 1 Check to make sure that either the RHYTHM or SONG LED is unlit.



- 3 Specify the beat.

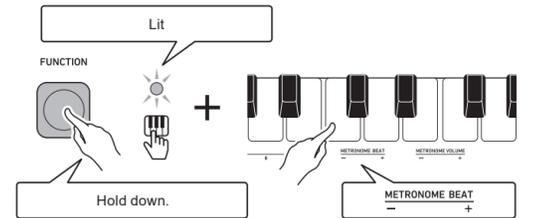

## Changing the Tempo

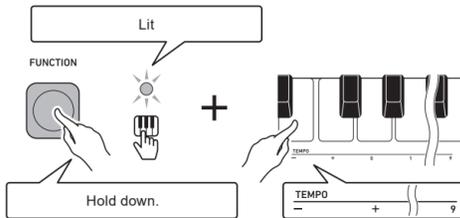

## Saving and Loading Instrument Settings

### To save to My Setups




### To load from My Setups





## Selecting a Tone



### To select a main tone

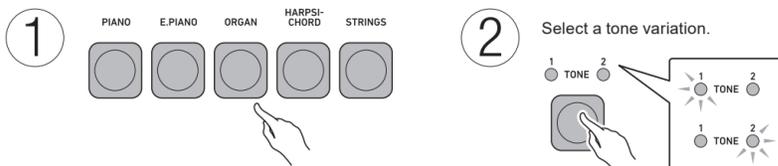


### To use the keyboard to select a tone

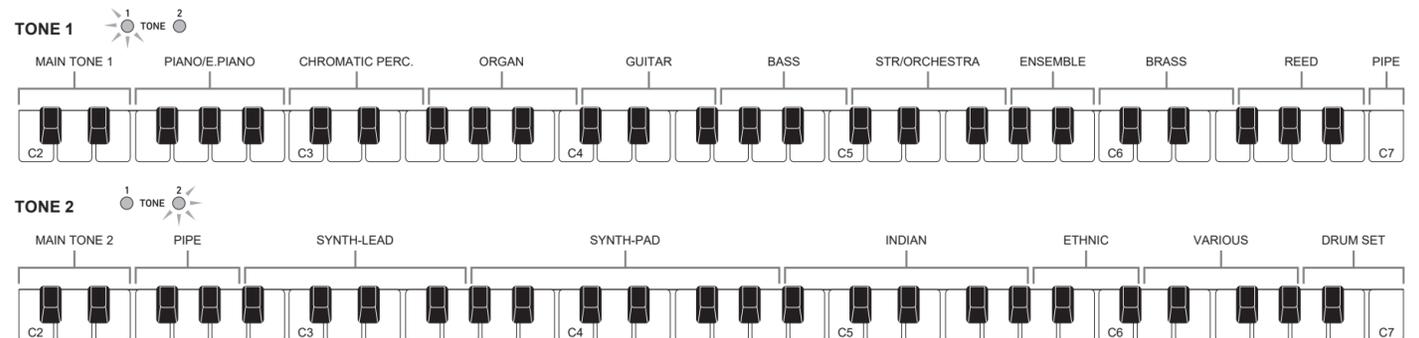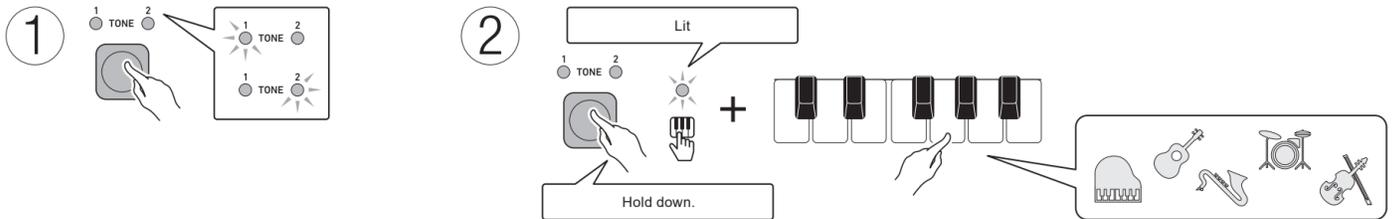


## Playing a Built-in Song

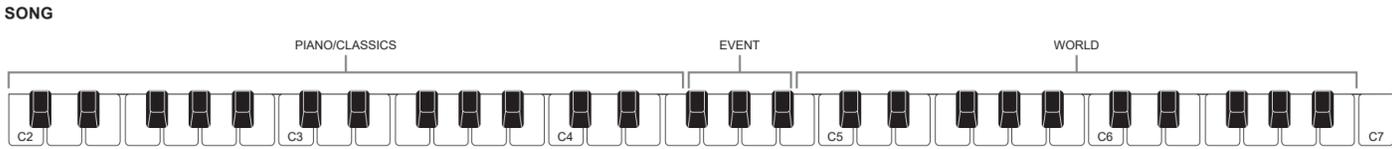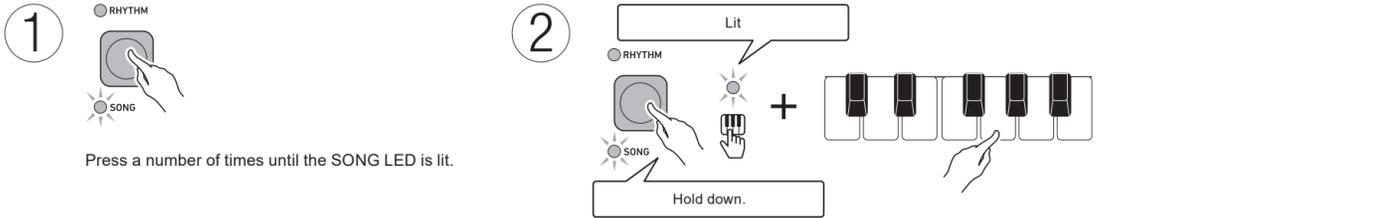



### To play the song

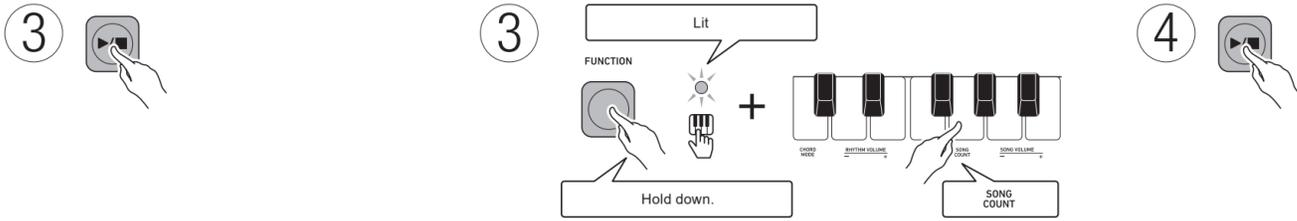


### To practice a particular part

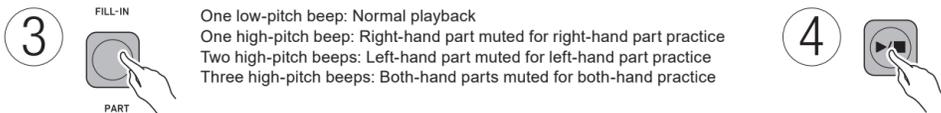

## Playing a Rhythm

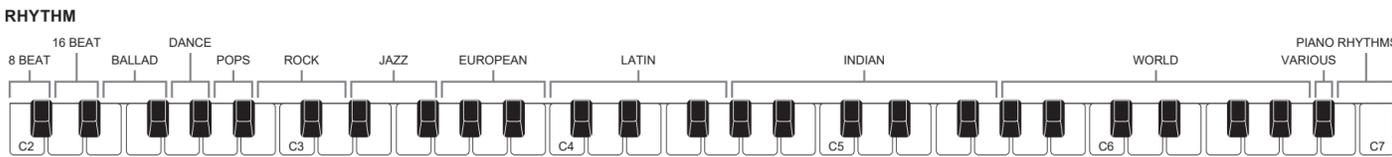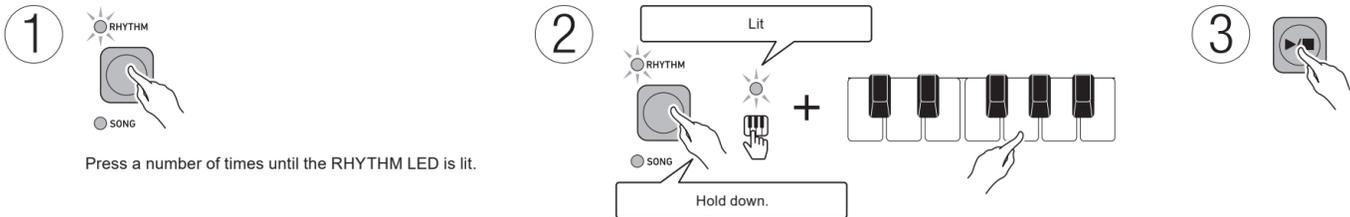


### To insert a fill-in

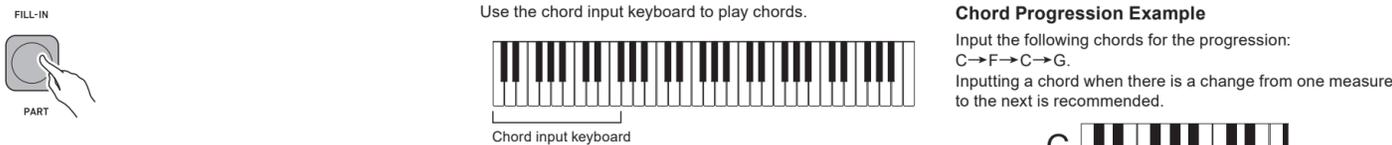

## Configuring Function Settings


Select a function.

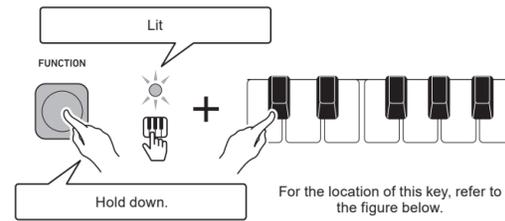


Example: To specify the battery type  
One beep: Alkaline batteries  
Two beeps: Rechargeable nickel metal hydride batteries

- For information about functions, refer to the User's Guide available on the CASIO Website.

### To initialize a setting

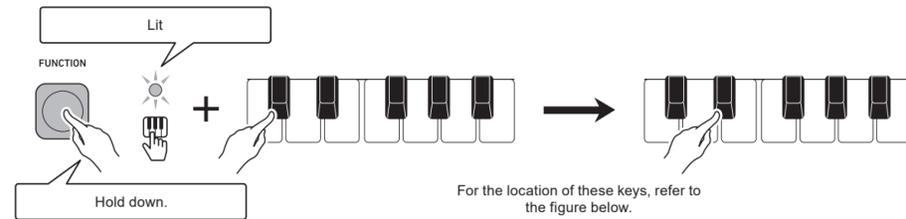

Specify the battery type

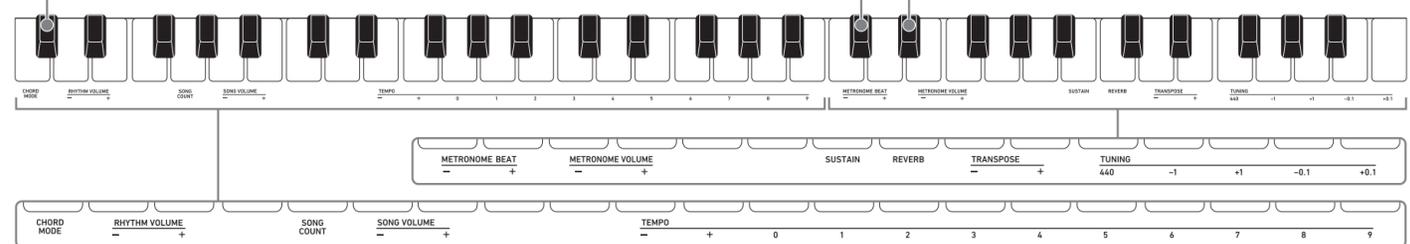

## Product Specifications

**Model:** CT-S100

**Keyboard:** 61 keys

**Maximum polyphony:** 32 tones

**Sound Source:** 122 preset tones

**Effects:** Reverb (4 types, Off)

**Metronome:** Bell sound off, 1 to 16 beats; Tempo Range: 20 to 255

**Song Bank:** 60 preset songs; Part Off Function: Left-hand, right-hand, both-hand

**Auto Accompaniment:** 61 preset rhythms, chord input mode switching

**Demo Function:** Looped play of all built-in Song Bank songs (60 songs)

**Function Volume Adjustment:** Metronome, Rhythm, Song

**Other Functions:** Transpose (±1 octave; -12 to 0 to +12 semitones), Tuning (A4 = 415.5 to 465.9 Hz; Default = 440.0 Hz)

**Input/Output Terminals:** PHONES/OUTPUT jack: Stereo mini jack (3.5mm); USB port: micro B

**Power Jack:** 9.5VDC

**Power Supply:** 2-Way Power; 6 AA-size alkaline batteries or AA-size rechargeable nickel metal hydride batteries. Continuous operation: approximately 16 hours (alkaline batteries), approximately 13 hours (rechargeable nickel metal hydride batteries)\*, actual battery life may be shorter depending on battery type, performance style, or operation environment; AD-E95100L AC adaptor (JEITA Standard, with unified polarity plug), 30-minute Auto Power Off (Can be disabled).

\* Measured values while using eneloop batteries.  
eneloop is a trademark of Panasonic Corporation.

**Speakers:** 13 cm × 6 cm (oval) × 2 (Output: 2.0W+2.0W)

**Power consumption:** 9.5V --- 5.5W

**Dimensions:** 93.0(W) × 25.6(D) × 7.3(H) cm (36 5/8 × 10 1/16 × 2 7/8 inch)

**Weight:** Approximately 3.3 kg (7.3 lbs) (Excluding batteries)

Specifications and designs are subject to change without notice.

- Any reproduction of the contents of this manual, either in part or its entirety, is prohibited. Except for your own, personal use, any other use of the contents of this manual without the consent of CASIO is prohibited under copyright laws.
- IN NO EVENT SHALL CASIO BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS MANUAL OR PRODUCT, EVEN IF CASIO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
- The contents of this manual are subject to change without notice.
- Company and product names used in this manual may be registered trademarks of others.

### Declaration of Conformity

Model Number: CT-S100  
Trade Name: CASIO COMPUTER CO., LTD.  
Responsible party: CASIO AMERICA, INC.  
Address: 570 MT. PLEASANT AVENUE, DOVER, NEW JERSEY 07801  
Telephone number: 973-361-5400  
This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

A labels rating is affixed to the bottom of the product.

CASIO COMPUTER CO., LTD.  
6-2, Hon-machi 1-chome  
Shibuya-ku, Tokyo 151-8543, Japan