



BEAMZ
MADE
EAZY

152.106 V1.2

IGNITE300A

QUICK **START** GUIDE

CONTROL MENU


MENU				DESCRIPTION
ADDRESS	001-512			DMX address setting
RUN MODE	DMX512	Channel	22ch	Select DMX mode
			User	
	Auto 1			Select Auto mode
	Auto 2			Select Auto mode
	Sound			Select Sound mode
	Manual	Pan	000-255	Adjust manual setting
		Pan Fine	000-255	
		Tilt	000-255	
		Tilt Fine	000-255	
		Speed	000-255	
		Dimmer	000-255	
		Strobe	000-255	
		Color	000-255	
		Color Fine	000-255	
		Zoom	000-255	
		Focus	000-255	
		Focus Fine	000-255	
		Gobo 1	000-255	
		Gobo 1 Rot	000-255	
		Gobo 2	000-255	
		Animation	000-255	
Effects		000-255		
Prism 1		000-255		
Prism 1 Rot		000-255		
Prism 2	000-255			
Prism 2 Rot	000-255			
SETTINGS	Sound Sensor		000- 255	Adjust Sound setting
	LCD Reverse		No	LCD screen Reverse Yes/No
			Yes	
	LCD Light		60S	LCD backlight turn off after 60 sec.
			On	LCD backlight always on
	DMX Error		Black	When DMX signal fails: go to start position
			Save	When DMX signal fails: remember last step
	Motor invert	Pan	No	Select invert function
			Yes	
		Tilt	No	Select invert function
			Yes	
SPECIAL	Motor Reset	Pan	Reset Function	
		Tilt		
		Color		
		Gobo 1		
		Gobo 2		
		Zoom		
		ANI		
		EFF		
		Prism 1		
		Prism 2		
	Motor Adjust	Pan	Adjust setting	

	Tilt	
	Color	
	Gobo 1	
	Gobo 2	
	Zoom	
	Focus	
	ANI	
	EFF	
	Prism 1	
	PMI_Rot	
	Prism 2	
Error Stats	Pan	Stats setting
	Tilt	
	Color	
	Gobo 1	
	Gobo 2	
	Prism 1	
	Prism 2	
P/T Correct	Yes	Choose automatic position correct yes/no
	No	
Fan Mode	Auto	Choose between auto or on fan mode
	On	
Information		General system information

DMX CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	PAN	000-255	Pan Movement (540°)
2	PAN FINE	000-255	16bit Pan Movement
3	TILT	000-255	Tilt Movement (270°)
4	TILT FINE	000-255	16bit Tilt Movement
5	PAN/TILT SPEED	000-255	Decreasing speed
6	DIMMER	000-255	Dimmer 0-100%
7	STROBE	000-004	No function
		005-099	Strobe at linearly variable frequency from slow to fast
		100-199	Pulsation at linearly variable speed
		200-239	Random strobe
		240-255	No function
8	COLOR	000-019	Open/White
		020-039	Color 1
		040-059	Color 2
		060-079	Color 3
		080-099	Color 4
		100-119	Color 5
		120-139	Color 6
		140-159	Color 7
		160-179	Color 8
		180-199	Skipped rotation from slow to fast
		200-227	Rainbow effect from fast to slow
		228-255	Rainbow effect from slow to fast
9	COLOR FINE	000-255	0-100%
10	ZOOM	000-255	Zoom linearly moves
11	FOCUS	000-255	Focus moves
12	FOCUS FINE	000-255	16bit Focus Movement
13	ROTATION GOBO	000-017	Open/White
		018-031	Gobo1
		032-045	Gobo2
		046-059	Gobo3
		060-073	Gobo4
		074-087	Gobo5
		088-101	Gobo6
		102-115	Gobo7
		116-135	Gobo1 Shakes at variable speed from slow to fast
		136-155	Gobo2 Shakes at variable speed from slow to fast
		156-175	Gobo3 Shakes
		176-195	Gobo4 Shakes
		196-215	Gobo5 Shakes
		216-235	Gobo6 Shakes
		236-255	Gobo7 Shakes
14	GOBO ROTATION	000-019	Stop
		20-102	Forwards gobo rotation from fast to slow
		103-108	Stop rotation
		109-191	Backwards gobo rotation from slow to fast
		192-255	CW/CCW rotation from slow to fast
15	STATIC GOBO	000-009	Open/White

		010-019	Gobo1
		020-029	Gobo2
		030-039	Gobo3
		040-049	Gobo4
		050-059	Gobo5
		060-069	Gobo6
		070-079	Gobo7
		080-089	Gobo8
		090-099	Gobo9
		100-109	Gobo1 Shakes
		110-119	Gobo2 Shakes
		120-129	Gobo3 Shakes
		130-139	Gobo4 Shakes
		140-149	Gobo5 Shakes
		150-159	Gobo6 Shakes
		160-169	Gobo7 Shakes
		170-179	Gobo8 Shakes
		180-189	Gobo9 Shakes
		190-222	Forwards rainbow effect from fast to slow
		223-255	Backwards rainbow effect from slow to fast
16	ANIMATION WHEEL	000-019	No function
		020-255	CW/CCW rotation from slow to fast
17	FUNCTION DISK	000-019	No function
		020-063	Frost wheel Insertion
		064-127	Seven Colorful wheel
		128-191	Continuous rotation from fast to slow
		192-255	Continuous rotation from slow to fast
18	PRISM 1	000-127	Prism out
		128-255	Prism into
19	PRISM ROT	000-063	Rot index
		064-127	Forwards Continuous rotation from fast to slow
		128-131	Stop
		132-195	Backwards Continuous rotation from slow to fast
		196-255	CW/CCW rotation from slow to fast
20	PRISM 2	000-127	Prism out
		128-255	Prism into
21	PRISM 2 ROT	000-063	Rot index
		064-127	Forwards Continuous rotation from fast to slow
		128-131	Stop
		132-195	Backwards Continuous rotation from slow to fast
		196-255	CW/CCW rotation from slow to fast
22	CONTROL	000-019	No function
		020-039	Auto 1
		040-059	Auto 2
		060-199	No function
		200-219	Reset all
		220-255	No function

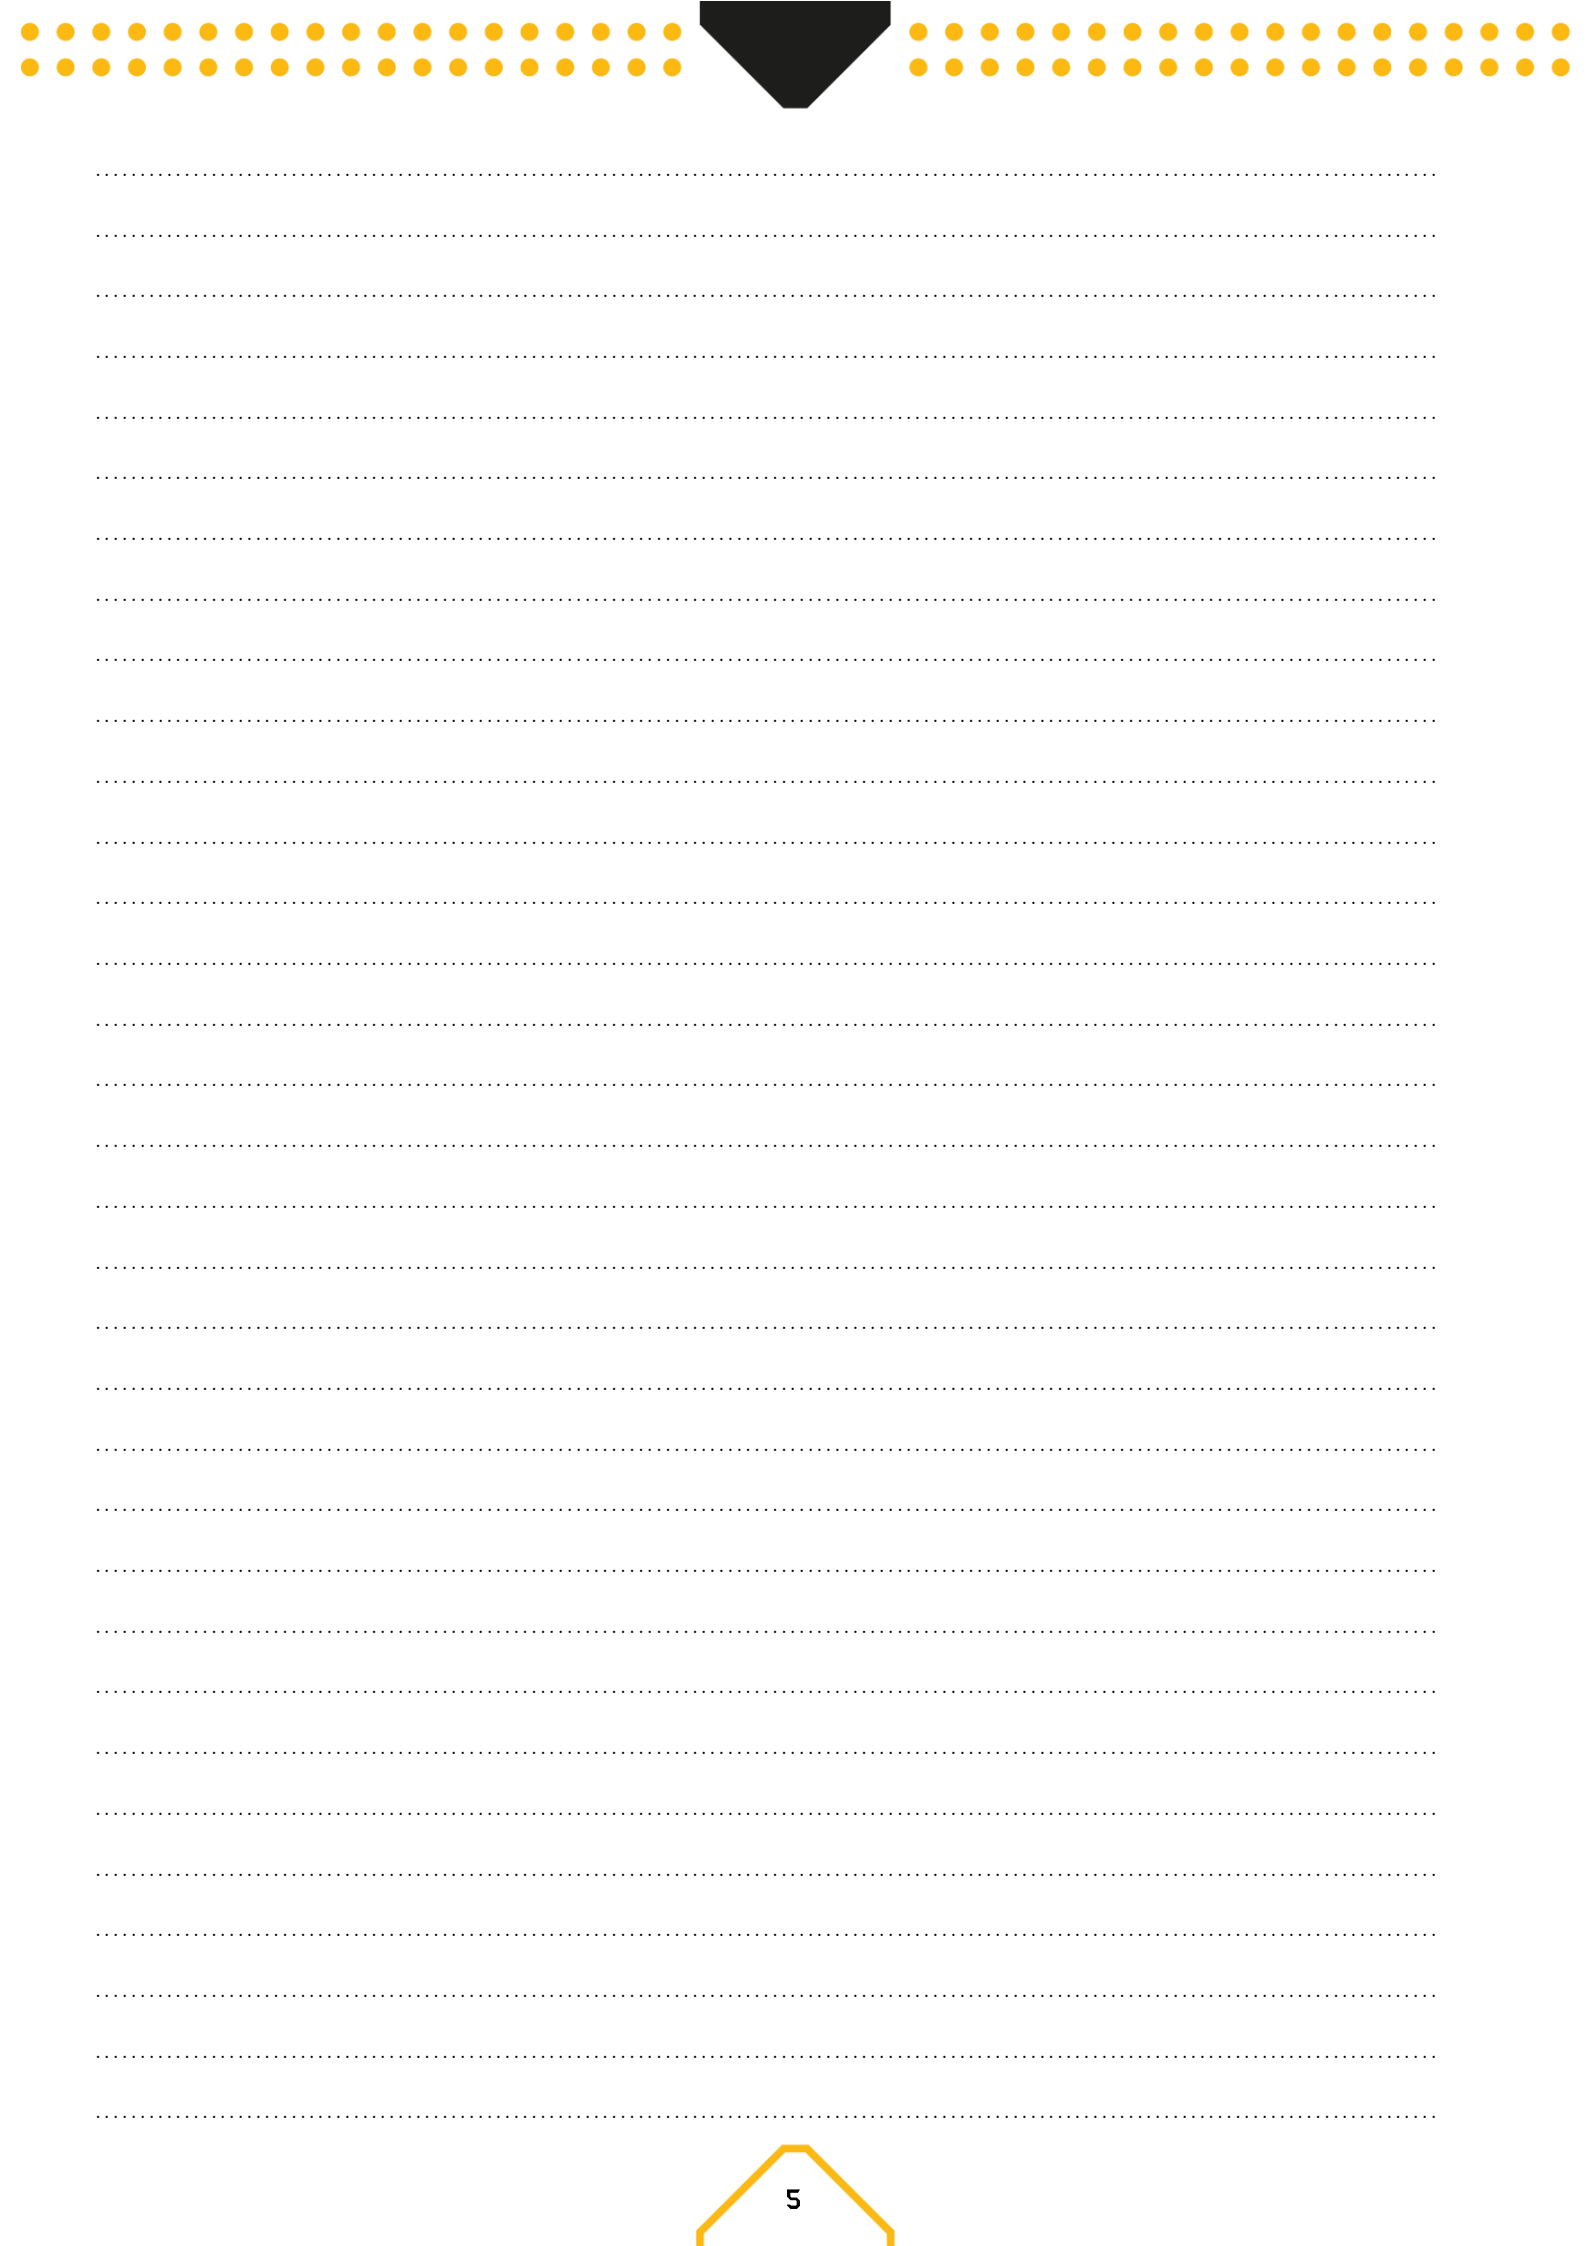



Handwriting practice lines consisting of 20 horizontal dotted lines.



BEAMZ

YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT

 **beamZ^{Pro}**

offers a wide range of high performance lighting equipment and related accessories for the rental, entertainment and architectural lighting markets. BeamZ Pro stands for performance, innovation and value pricing!



BEAMZLIGHTING.COM