



KB15 Electronic Keyboard 61-key

Ref. nr.: 130.070,130.072



INSTRUCTION MANUAL

V1.0

Congratulations to the purchase of this Max Music product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the product on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- During operation, the housing may become hot.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Only operate the product with clean hands.
- Do not force the controls.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Max cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. If the product must be returned to the factory, it is important that the product is returned in the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Supplied contents:

- MAX Music KB15 keyboard
- Micro usb cable
- Music sheet stand

 
POWERSUPPLY

The label on the bottom of the product indicates to what type of power supply the product must be connected. Check that the mains voltage corresponds to this, all other voltages may cause irreparable damage. The product must also be directly connected to the mains, no dimmer or adjustable power supply.



Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

CONTROLS

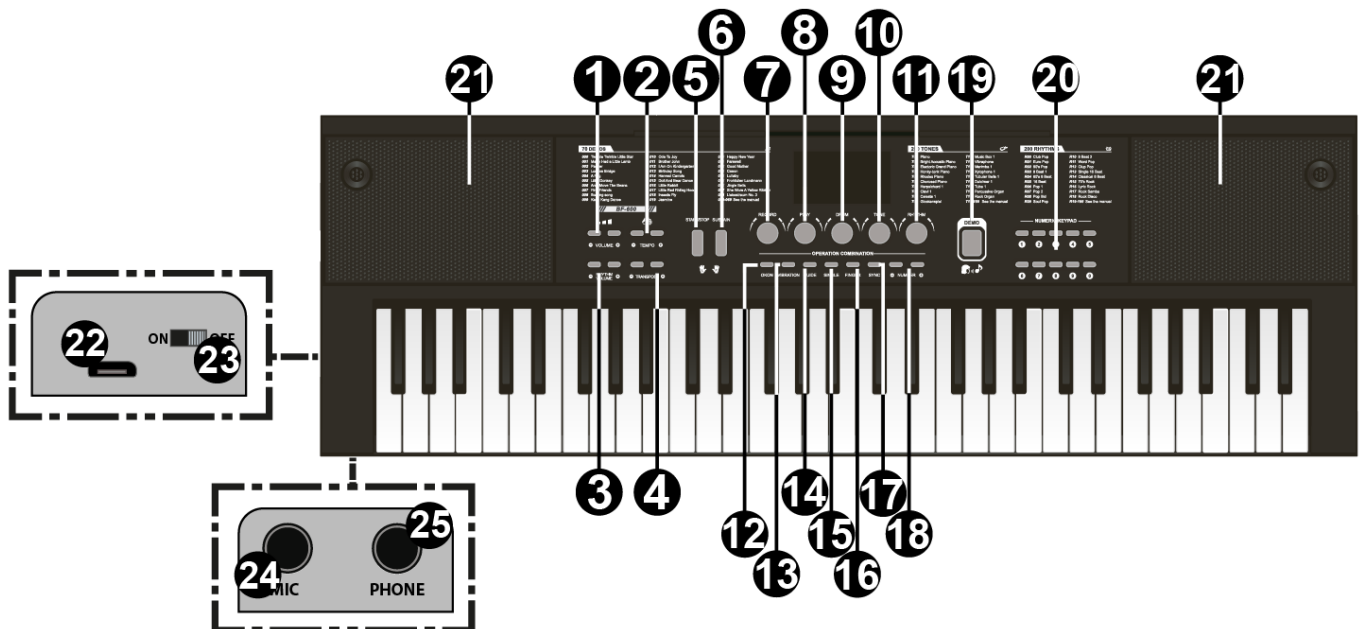

- 1. MASTER VOLUME**
Press [Master Vol +] or [Master Vol -] to raise or lower the master volume.
- 2. TEMPO**
Press [Tempo +] or [Tempo -] to increase or decrease the rhythm speed.
- 3. RYTHME VOLUME**
Press [Rythme Vol +] or [Rythme Vol -] to raise or lower the accomp volume.
- 4. TRANPOSE**
Press [+] or [-] to accurately correct the pitch from “-6” to “+6”.
- 5. START/STOP**
Press to start or stop playing selected program.
- 6. SUSTAIN**
Press this button to extend the sound of the key.
- 7. RECORD**
Press Rec Button and you can record the music you play. It can record 85 notes, if the song is more than 85 notes; it will automatically record the first 85 notes.
- 8. PLAY**
Press to playback recorded notes or rhythms.
- 9. KEYBOARD DRUMS**
Please refer to the appendix 5 for the list of keyboard drums/animal sounds. There are total 61 voices for percussions and animals sounds with 61 different keys. Press the button “Drum” again to exit this function.
- 10. TONE**
The factory setting tone is piano, There’re totally 200 tones, please refer to the appendix 2 for all details

Press "tone" button, and enter into the digital buttons area to choose the tone you need. Tone starts from "00" to "199" and if the input is out of this range, it will be ineffective.

11. Rhythm

There're totally 200 rhythms, please refer to the appendix 3 for all details. Press "start/stop" button to start the rhythm you need. Rhythm starts from "00" to "199" and if the input is out of this range, it will be ineffective.

12. Okon (one key for one note)

Press this button and choose the Demo number with the digital buttons, it will start to play background music from the demos, and you can play any black or white keys which will be automatically correct as the demos.

13. VIBRATION

Press this button to have the vibrating sound.

14. Guide

Press "Guide" to enter this mode and choose the Demo number with the digital buttons, it will start to play background music from the demo. User can play the song with the memory to follow the background music. If you want to stop, then press "Start/Stop" button. In this step, you can adjust the tempo according to your own speed that you like.

15. SINGLE FINGER CHORD (Please refer to the appendix 4 for fingering)

Press "RHYTHM" and choose any rhythm, then press "Single" to enter this mode.

Next, play one of any 20 keys on the most left hand side to start the chord. Press "SINGLE" again to exit this function.

16. FINGERED CHORD (Please refer to the appendix 4 for fingering)

Press "RHYTHM" and choose any rhythm, then press "Finger" to enter this mode.

Next, play one of any 20 keys on the most left hand side to start the chord. Press "Finger" again to exit this function.

17. SYNC

Under this mode, the rhythm and chord will synchronize with the tone. Press this button and the LED display will show "SY" on the screen. Choose the "Rhythm and Tone NO". and choose Single Finger Chord or Fingered Chords, Then the left hand could play the chords and the right hand play the tones at the same time.

18. NUMBER - / +

Select the number in your screen with one up or one down.

19. DEMO

Totally 70 Demos, please see appendix 1 for full details.

Press DEMO, it will play songs in continuous playback mode and starts from song NO. "00" to "69" or pressing the button "+" "-" to choose the right numbers of the songs you need. If you want to stop, press the button "DEMO" Again, Or just press the start/stop button.

20. DIGITAL BUTTONS

Press the number you need to choose the TONE, RHYTHM or DEMO numbers. Or Press "+" button or "-" button for more than 2 seconds to increase or reduce the numbers showed in the Display. When you input the numbers to choose the TONE, RHYTHM or DEMO, please press the numbers within the Limit, Otherwise the input is ineffective. For Example, the limit of DEMO is only 69, input of 71 will be ineffective. For example, the limit of demo is only 69, input of 71 will be ineffective.

21. SPEAKERS

Loudspeakers to reproduce the sound of the music played. sound level is determined on the basis of the volume setting.

CONNECTIONS

22. DC INPUT

Socket for plugging in the supplied micro USB power cable.

23. POWER ON/OFF

Switch to turn the keyboard on or off.

24. MICROPHONE INPUT

Connect a microphone to the MIC port to sing while playing the keyboard.

25. HEADPHONES/OUTPUT

When connecting headphones to the PHONES/OUTPUT port, the loudspeaker will be disabled automatically. You can perform without disturbing others and other disturbing you.

RECOMMENDED TRAINING APPS / GAMES

MAX highly recommends the below apps to support you on your journey of piano exploration. It has never been this easy to dip your toes in the deep and majestic waters of playing the piano. Train yourself from novice to king of the keys with help from **PIANO DUST BUSTER**, **PIANO MAESTRO** and **SIMPLY PIANO**.

Please note: downloading the below apps is free of charge. Expanding the apps with more training, songs and other additives might involve costs.



PIANO DUST BUSTER

PIANO DUST BUSTER is the ultimate introduction to piano for kids. No previous piano experience needed!



PIANO MAESTRO

An in depth educational tool to study piano. From a single note to complete pieces, **PIANO MAESTRO** makes sheet music come to life!



SIMPLY PIANO

Explore the piano step-by-step, from scratch. **SIMPLY PIANO** will help you learn the basics from sight-reading to playing with both hands.

PIANO DUST BUSTER

Help granny dusting off her piano while collecting points and bonuses. Piano Dust Buster is a great tool to get excited about playing your piano and improving your skills. Piano Dust Buster is an ultimate introduction to piano, no previous piano experience needed. You have the option to begin practicing reading notation, compete against other players or challenge yourself to hundreds of songs ranging from Beethoven to Adele. (*IOS compatible only!)



PIANO MAESTRO

#1 ranked Education App. An in depth educational tool for beginning to study piano. PIANO MAESTRO helps practicing and learning sight reading, rhythm, technique, playing with both hands and much more!

In addition you will

Progress up in chapters, unlock new songs and raise the difficulty level along the way. Learn to play songs step by step and have access to practice options. You're able to personalize your learning experience.

Piano Method Books Included

Learn songs from some of the most well-known and beloved piano method books used today. A digital way to compliment the use of your favorite method book, all books can be found in the Library in the 'Methods' section. (*IOS-IPAD compatible only!)



SIMPLY PIANO (IOS and ANDROID COMPATIBLE)

Whether you're a complete beginner or want to learn piano on your own, SIMPLY PIANO will guide you to become the piano player you always wanted to be. Just place your IOS or Android device on your piano and play. Your device will immediately recognize what you are playing!

- Learn the piano basics from sight-reading to playing with both hands
- Tons of fun songs ranging from classical to top-charting hits
- Listens to how you play, giving you instant feedback to quickly learn and improve your skills
- Courses for different tastes and levels including pop chords, essentials, blues and more



(* Compatible with both IOS and ANDROID devices) Appendix 1 (70 Demos)

APPENDIX 1 (70 DEMOS)

S000 Twinkle Twinkle Little Star	S036 When we are together
S001 Marry Had a Little Lamb	S037 Red River Valley
S002 Painter	S038 Shuibian
S003 London Bridge	S039 friendship all way long
S004 A Pug	S040 silent night
S005 Little Donkey	S041 Let It Be
S006 Ants Swallow The Beans	S042 Edelweiss
S007 Find Friends	S043 fairy tale
S008 Boating song	S044 Wavy girl
S009 Kang Kang Dance	S045 the first time
S010 Ode To Joy	S046 Youth practice manual
S011 Are You Sleeping	S047 Break up happy
S012 I Am On Kindergarten	S048 Warm
S013 Birthday Song	S049 Small apple
S014 Harvest Carrots	S050 Summer fruit
S015 Doll And Little Male Dance	S051 those flowers
S016 Little Rrabbit Obediently	S052 Huang Li birds and snails
S017 Little Red Riding Hood	S053 The Bending Moon
S018 Insects Fly	S054 Liuyang River
S019 Jasmine	S055 Aobaoshan
S020 Happy New Year	S056 How Many Peach Blossom
S021 Farewell	S057 Ging Zang A Plateau
S022 The World Is Only Good Mother	S058 Alishan Girl
S023 Canon	S059 Liang Zhu
S024 Lullaby	S060 Good Life Of Peace
S025 Frohlicher Landmann	S061 The Penghu Bending Grandmother
S026 Jingle Bells	S062 Sweet Honey
S027 She Wore A Yellow Ribbon	S063 Small Poplar
S028 Liebestraum No. 3	S064 Trials of a long journey always intelligence
S029 Come Home	S065 Ninety-Nine Sunny
S030 Lovely home	S066 New Century
S031 Pong variation	S067 Nanni Bay
S032 Long Long Ago	S068 Beijing Welcomes You
S033 Cha Cha	S069 Cloud To Chase The Moon
S034 Dingdong Merry Gentlemen	
S035 The Farmer In The Dell	

APPENDIX 2: A.200 TONES



















 



 

 

























 

T00 Piano	T33 Electoric Bass (Pick)	T66 Baritone Sax	T99 Reverse Cymbal	T134 PIABAN	T169 BELVIO
T01 Bright Acoustic Piano	T34 Fretless Bass	T67 Oboe 1	T100 Acoustic Grand Piano	T135 BASMUB	T170 BELHAR
T02 Electoric Grand Piano	T35 Slap Bass 1	T68 English Horn 1	T101 Violin	T136 BASBEL	T171 BELSTR
T03 Honky-tonk Piano	T36 Slap Bass 2	T69 Bassoon	T102 Guitar	T137 BASORG	T172 BELTRU
T04 Rhodes Piano	T37 Synth Bass 1	T70 Clarinet 1	T103 Trumpet	T138 BASGUI	T173 BELTUB
T05 Chorused Piano	T38 Synth Bass 2	T71 Piccolo	T104 Harp	T139 BASJAZ	T174 BELHOR
T06 Harpsichord 1	T39 Violin 1	T72 Flute 1	T105 Strings	T140 BASVIO	T175 BELSAX
T07 Clavi 1	T40 Viola	T73 Recorder	T106 Bell	T141 BASHAR	T176 BELOBO
T08 Celesta 1	T41 Cello	T74 Pan Flute	T107 Organ	T142 BASSTR	T177 BELCLA
T09 Glockenspiel	T42 Contrabass	T75 Blown Bottle	T108 Bass	T143 BASTRU	T178 BELFLU
T10 Music Box 1	T43 Tremolo Strings	T76 Shakuhach	T109 Saxophone	T144 BASTUB	T179 BELBAN
T11 Vibraphone	T44 Pizzicato Strings	T77 Whistle	T110 Music Box	T145 BASHOR	T180 BANMUB
T12 Marimba 1	T45 Orchestral Harp	T78 Horn	T111 Horn	T146 BASSAX	T181 BANORG
T13 Xylophone 1	T46 Timpani	T79 Lead 1 (square)	T112 Banjo	T147 BASOBE	T182 BANJAZ
T14 Tubular Bells 1	T47 String Ensemble 1	T80 Lead 2 (Sawtooth)	T113 Oboe	T148 BASCLA	T183 BANVIO
T15 Dulcimer 1	T48 String Ensemble 2	T81 Lead 3 (Calliope)	T114 Jazz Giutar	T149 BASFLU	T184 BANHAR
T16 Tuba 1	T49 Synth Strings 1	T82 Lead 8 (Bass+Lead)	T115 Flute	T150 BASBAN	T185 BANSTR
T17 Percussive Organ	T50 Synth Strings 2	T83 Pad 2 (Warm)	T116 Clarinet	T151 GUIMUB	T186 BANTRU
T18 Rock Organ	T51 Choir Aahs	T84 Sitar	T117 Tuba	T152 GUIBEL	T187 BANTUB
T19 Organ 1	T52 Voice Oohs	T85 Banjo 1	T118 Synth Piamub	T153 GUIORG	T188 BANHOR
T20 Reed Organ 1	T53 Synth Voice	T86 Shamisen 1	T119 Synth Piabel	T154 GUIJAZ	T189 BANSAX
T21 Accordion	T54 Orchestra Hit	T87 Koto 1	T120 PIAORG	T155 GUIVIO	T190 BANOBO
T22 Harmonica	T55 Trumpet 1	T88 Kalimba 1	T121 PIAGUI	T156 GUIHAR	T191 BANCLA
T23 Tango Accordion	T56 Trombone	T89 Bag Pipe 1	T122 PIAJAZ	T157 GUISTR	T192 BANFLU
T24 Acoustic Guitar (Nylon)	T57 Tuba 2	T90 Fiddle	T123 PIABAS	T158 GUITRU	T193 HARMUB
T25 Acoustic Guitar (Steel)	T58 Muted Trumpet	T91 Shanai 1	T124 PIAVIO	T159 GUITUB	T194 HARORG
T26 Electoric Guitar (Jazz)	T59 French Horn	T92 Tinkle Bell	T125 PIAHAR	T160 GUIHOR	T195 HARJAZ
T27 Electoric Guitar (Clean) 1	T60 Brass Section	T93 Agogo	T126 PIASTR	T161 GUIHAR	T196 HARVIO
T28 Electoric Guitar (Muted)	T61 Synth Brass 1	T94 Steel Drums	T127 PIATRU	T162 GUIOBO	T197 HARSTR
T29 Overdriven Guitar	T62 Synth Brass 2	T95 Woodblock 1	T128 PIATUB	T163 GUICLU	T198 HARTRU
T30 Distortion Guitar	T63 Soprano Sax	T96 Taiko Drum	T129 PIAHOR	T164 GUIFLU	T199 HARTUB
T31 Acoustic Bass	T64 Alto Sax	T97 Melodic Tom	T130 PIASAX	T165 GUIBAN	
T32 Electoric Bass (Fingar)	T65 Tenor Sax 1	T98 Synth Drum	T131 PIAOBO	T166 BELMUB	
			T132 PIACLA	T167 BELORG	
			T133 PIAFLU	T168 BELJAZ	

APPENDIX 3: B. 200 RHYTHMS:

R00 Club Pop	R33 Brazil Mombo	R66 Disco	R99 Classical Swing	R134 8BTSWI 2	R169 16 BBLU 3
R01 Euro Pop	R34 Tricks Mambo	R67 Baladi	R100 CLUP POP	R135 8BTSWI 3	R170 POPBLU 1
R02 90's Pop	R35 Classical Rumba	R68 Indonesian Pop	R101 EURO POP	R136 60'S SWI	R171 POPBLU 2
R03 8 Beat 1	R36 Brazilian Tango	R69 Jazz Samba	R102 90'S POP	R137 16 BSWI 1	R172 70'S BLU
R04 60's 8 Beat	R37 Jazz Cha Cha	R70 Classical Disco	R103 8 BEAT	R138 16 BSWI 2	R173 POPBLU
R05 16 Beat	R38 Pop Waltz	R71 Indigenous Reggae	R104 8 BTBLD1	R139 16 BSWI 3	R174 16 BBLU
R06 Pop 1	R39 Samba	R72 Classical Reggae	R105 8 BTBLD2	R140 PPSWI 1	R175 SOUBLU
R07 8 Beat 2	R40 Bsanva	R73 Jazz Polka	R106 60'S 8 BEAT	R141 PPSWI 2	R176 OLDBLU
R08 Pop Bld	R41 Brazil Latin	R74 Jazz Disco	R107 16 BEAT	R142 70'S SWI	R177 NORBLU
R09 Soul Pop	R42 Mixed Bossanova	R75 Country Slow Rock	R108 16 BEATBLD	R143 PPSWI	R178 BLUBLU 1
R10 8 Beat 2	R43 Tricks Bossanova	R76 South Africa Country	R109 16 BTSHFL	R144 16 BSWI	R179 BLUBLU 2
R11 Word Pop	R44 Jazz Latin	R77 Classical Boogie	R110 POP 1	R145 SOUSWI	R180 FRWBLU
R12 Clup Pop	R45 Indigenous Salsa	R78 Country Waltz	R111 POP2	R146 OLDSWI	R181 DISBLU
R13 Single 16 Beat	R46 Jazz Bossanova	R79 Country Jazz	R112 70'S ROCK	R147 NORSWI	R182 WORBLU
R14 Classical 8 Beat	R47 Europe Samba	R80 Classical Country	R113 POP BLD	R148 BLUSWI 1	R183 SAMBLU
R15 70's Rock	R48 Tricks Latin	R81 Country Cha Cha	R114 16 BTSOUL	R149 BLUSWI 2	R184 SWIBLU
R16 Lyric Rock	R49 Latin Salsa	R82 Jazz Boogie	R115 SOUL POP	R150 FRWSWI	R185 TANBLU
R17 Rock Samba	R50 8 BtblD1	R83 16 Btshfl	R116 OLDIESHFL	R151 DISSWI	R186 CHABLU
R18 Rock Disco	R51 8 BtblD2	R84 16 Btsoul	R117 N.O.R&R	R152 WORSWI	R187 VIEBLU
R19 Single Rock	R52 16 Beatbld	R85 SWING	R118 BLUEGRAS 1	R153 SAMSWI	R188 BSABLU
R20 Rock Salsa	R53 Fr Waltz	R86 Cluswi	R119 BLUEGRAS 2	R154 SWISWI	R189 BALBLU
R21 Indigenous Slow Rock	R54 VIENWLTZ	R87 Eurswi	R120 FR WALTZ	R155 TANSWI	R190 CLUVIE
R22 Classical Slow Rock	R55 Europe Swing	R88 90's Swi	R121 DISCO	R156 CHASWI	R191 EURVIE
R23 Rock Boogie	R56 Europe Reggae	R89 8Btswi 1	R122 WORD POP	R157 VIESWI	R192 SPOVIE
R24 European Rock	R57 Indigenous Polka	R90 8Btswi 3	R123 SAMBA	R158 BSASWI	R193 BEAVIE
R25 Indigenous Rock	R58 India's Indigenous	R91 16 BSWI 1	R124 SWING	R159 BALSWI	R194 TBLVIE 1
R26 Cha Cha 1	R59 Europe 8 Beat	R92 16Beat Shuffle	R125 TANGO	R160 CLUBLU	R195 TBLVIE 2
R27 Mambo	R60 South Africa Polka	R93 Jazz 8 Beat	R126 CHA CHA	R161 EURBLU	R196 S8BVIE
R28 TANGO	R61 Argentina Waltz	R94 Indigenous Swing	R127 VIENWLTZ	R162 90'S BLU	R197 BEAVIE 1
R29 Cha Cha	R62 Indigenous	R95 Jazz Tango	R128 BSANVA	R163 8 BEBLU	R198 BEAVIE 2
R30 Indigenous Cha Cha	R63 Indigenous Rumba	R96 Jazz Slow Rock	R129 BALADI	R164 8 BEBLU 1	R199 BTVSIE
R31 Classical Tango	R64 Indigenous Country	R97 Jazz 16 Beat	R130 CLUSWI	R165 8 BEBLU 2	
R32 Jazz Rumba	R65 Caribbean Dance	R98 Jazz Bo	R131 EURSWI	R166 60'S BLU	
			R132 90'S SWI	R167 16 BBLU 1	
			R133 8BTSWI 1	R168 16 BBLU 2	

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

APPENDIX 5 (61 KEYS, DRUMS COMBINATION AND ANIMAL SOUNDS LIST)

DRUMS No.	DRUMS LIST	Pictures	DRUMS No.	DRUMS LIST	Pictures
Drum (01)	Bass Drum 1		Drum (32)	High Agogo	
Drum (02)	Side Stick		Drum (33)	Low Agogo	
Drum (03)	Acoustic Snare		Drum (34)	Cabasa	
Drum (04)	Hand Clap		Drum (35)	Maracas	
Drum (05)	Electric Snare		Drum (36)	Short Whistle	
Drum (06)	Low Floor Tom		Drum (37)	Long Whistle	
Drum (07)	Closed Hi-Hat		Drum (38)	Short Guiro	
Drum (08)	High Floor Tom		Drum (39)	Long Guiro	
Drum (09)	Pedal Hi-Hat		Drum (40)	Claves	
Drum (10)	Low Tom		Drum (41)	Hi Wood Block	
Drum (11)	Open Hi-Hat		Drum (42)	Low Wood Block	
Drum (12)	Low-Mid Tom		Drum (43)	Chicken	
Drum (13)	Hi-Mid Tom		Drum (44)	Pig	
Drum (14)	Crash Cymbal 1		Drum (45)	Bird	
Drum (15)	High Tom		Drum (46)	Cat	
Drum (16)	Ride Cymbal 1		Drum (47)	Cow	
Drum (17)	Chinese Cymbal		Drum (48)	Dog	
Drum (18)	Ride Bell		Drum (49)	Duck	
Drum (19)	Tambourine		Drum (50)	Frog	
Drum (20)	Splash Cymbal		Drum (51)	Horse	
Drum (21)	Cow Bell		Drum (52)	Sheep	
Drum (22)	Crash Cymbal 2		Drum (53)	High Q	
Drum (23)	Vibraslap		Drum (54)	Slap	
Drum (24)	Ride Cymbal 2		Drum (55)	Scratch Push	
Drum (25)	Hi Bongo		Drum (56)	Scratch Pull	
Drum (26)	Low Bongo		Drum (57)	Sticks	
Drum (27)	Mute Hi Conga		Drum (58)	Square Click	
Drum (28)	Open Hi Conga		Drum (59)	Metronome Click	
Drum (29)	Low Conga		Drum (60)	Metronome Bell	
Drum (30)	High Timbale		Drum (61)	Acoustic Bass Drum	
Drum (31)	Low Timbale				

TECHNICAL SPECIFICATION

Power Supply : 3.7V Micro Usb (rechargeable Li-ion Battery)
 Weight : 2.7 kg
 Dimensions : 830 x 260 x 80mm

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:
 Low Voltage (LVD) 2014/35/EU
 Electromagnetic Compatibility (EMC) 2014/30/EU
 Restriction of Hazardous Substances (RoHS) 2011/65/EU



Specifications and design are subject to change without prior notice.

www.tronios.com

Copyright © 2021 by Tronios The Netherlands