



BRACE

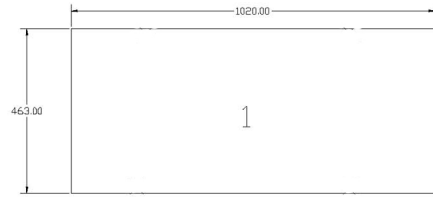


Fixing point for optional equipment bracket.

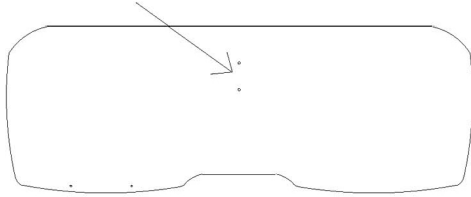


TOP PANEL

UPRIGHTS

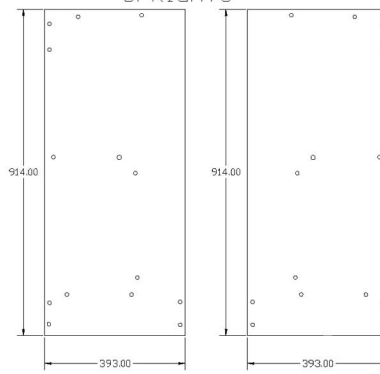

SIDE ASSEMBLY
C = FRONT EDGE

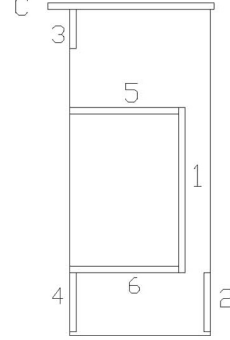

FASTENINGS PARTS LIST:
CAMS (BARREL SHAPED)
PINS - (SPECIAL SCREW WITH SOLD BODY)

Insert all the pins into the panels.

Each pin will connect with a cam in another panel.

Insert all the cams into the panels. Ensure that the arrow on top of the cam is visible when you insert the cam. Align the arrow on the top of the cam to point towards the direction the pin will enter the panel.

Assemble panel 4 and 6 together first. Fasten cams.

Assemble panel 1 and 5 onto 4 and 6 to form one section. Fasten cams.



The product should be assembled on its side. Place an UPRIGHT panel on the floor.

Lower the assembled section onto the UPRIGHT panel. (This is easier with 2 people) Fasten Cams.

Attach panel 2 fasten cams, Attach panel 3 (Note panel 3 has fasteners that attach to Top Panel. These should be at top). fasten cams.

Lower the other UPRIGHT panel onto the assembled panels. Fasten all pins to lock the UPRIGHT panel to other panels.


Lift the unit and attach the TOP PANEL. (Note panel 3 is at the top) (Take care not to let the top panel drop into place. Use two people to lower the top panel into place slowly.)

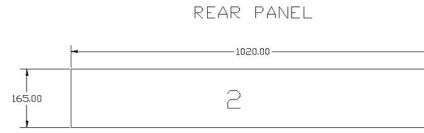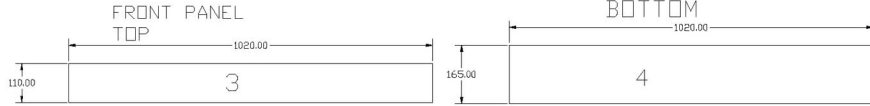

SHELF TOP



SHELF BOTTOM

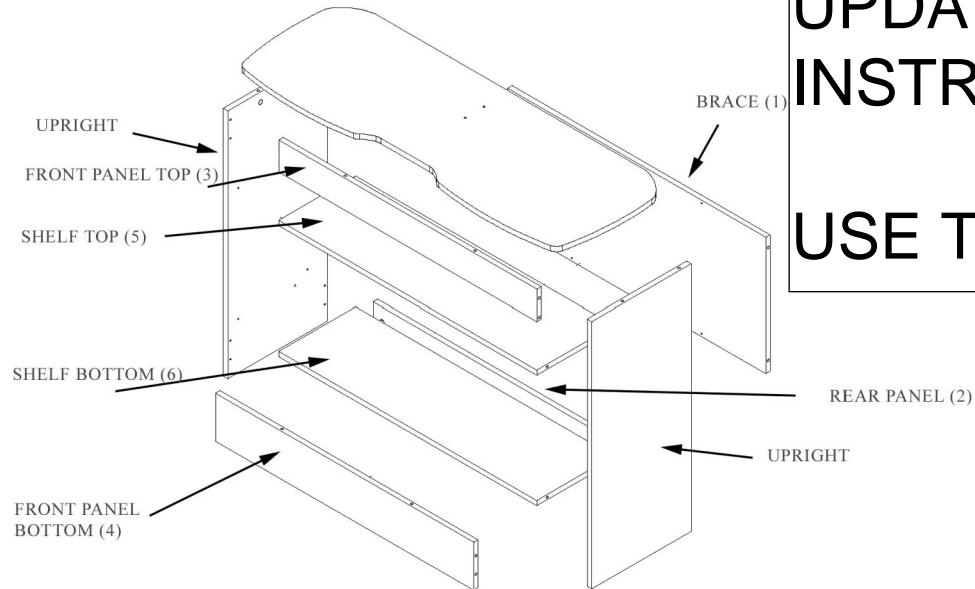

UPDATED
INSTRUCTIONS:
USE THESE!!!!!!!